



Place a figure in the correct shape and press for lights, sounds and songs!

 
Spin for lights and sounds.




Keep these instructions for future reference as they contain important information.




Battery installation is required. Only adults should install batteries. Required tool: Phillips screwdriver (not included).



 Requires three AA batteries (included) for operation. Batteries included are for demonstration purposes only.



 Slide the power/volume switch to ON with low volume, ON with high volume or OFF.

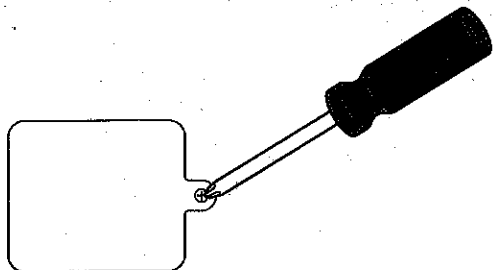

- For best performance and longer battery life, we recommend replacing the batteries that came with this toy with three, new AA (LR6) **alkaline** batteries.
  - Locate the battery compartment door. Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the batteries and properly dispose of them.
  - Insert three, new AA (LR6) **alkaline** batteries.
- Hint: We recommend using **alkaline** batteries for longer battery life.*
- Replace the battery compartment door and tighten the screw. Do not over-tighten.

- When sounds/lights from this product become faint or stop, it's time for an adult to change the batteries.
- Wipe the toy with a clean, damp cloth. Do not immerse. This toy has no consumer serviceable parts. Do not take apart.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power switch off and back on.